

Setup Code List for DIRECTV RC71H Remote Control

****Note:** To program the RC71H remote control: press and hold SELECT & MUTE keys for 3 seconds, until the visible green LED blinks twice. Then press the first digit of the code. Wait for two green LED blinks, then press the rest of the code. If a valid code has been entered, the green LED will blink twice.

Setup Codes for Audio – Accessory (M)		
ZVOX:	32332, 32334	
Setup Codes for Satellite Set Top Box (S)		
DIRECTV:	00001, 00002, 00003, 00004, 00005, 00006, 00007, 00008	11564, 10451, 10180, 13410, 13065, 12513, 12413, 12121, 11951, 11937, 11868, 11865, 11769, 11766, 11276, 10875, 10846, 10802, 10623
Hughes Network Systems:	00001	
Humax:	00001	
Qwest:	00001	Auria: 12087, 12277
Samsung:	00001	Aventura: 10171
SAT/PVR Combination (S)		Axion: 11937
DIRECTV	00001, 00002, 00003, 00004, 00005, 00006, 00007, 00008	Bang & Olufsen: 11620
Humax:	00001	Bell & Howard: 10154
Samsung:	00001	BenQ: 11756, 11315, 11562
Setup Codes for Television (T)		Berkshire: 10047
Aaxa:	13634	Bradford: 10180
Acer:	11339	Broksonice: 10463, 11911, 11935, 11938
Admiral:	10093, 10463, 10179	Byd:sign: 11311
Advent:	11570	Candle: 10186
Affinity:	13577, 13716, 13717	Carver: 10054
Aiwa:	11362, 11916	CCE: 10623
Akai:	10702, 11675, 1065, 10672, 11207, 118385, 11688, 11690	Celera: 10765
Akura:	11498	Champion: 11362
Alaron:	10179	Changhong: 10765
Albatron:	107000	Citizen: 10060, 10186, 11672, 11935
America Action:	10180	Clarion: 1080
Anam:	10180	Claris: 13807
AOC:	11589, 12087, 11089, 11365, 11590, 12014, 12402, 12621, 13707	Coby: 13478, 13646, 13629, 13627, 13493, 13202, 12560, 12348, 12347, 12344, 12340, 12338, 12326, 12315, 12314, 12306, 12017, 11634, 11538
Aomni:	11623	Commercial Solutions: 11447, 10047
Apex Digital:	12397, 10748, 10765, 10890, 11217, 11943	Conia: 11498
Astar:	11531	Contec: 10180
Asus:	13340	Contex: 13939, 14053, 14156
Audiosonic:	11675	Cornea: 13677
		Craig: 10180, 13423
		Crosley: 10054, 13115

Setup Code List for DIRECTV RC71H Remote Control

Crown:	10180	FireTV:	12434
CTX:	10700	Fluid:	12964
Curtis:	12397, 11326, 12352, 12466, 12855, 12859, 13228, 13577, 13636, 13895, 13939	Fujimaro:	11498
		Fujitsu:	10809, 10179, 10186, 10853
Curtis Mathes:	10702, 10054, 10093, 10060, 10047, 10154, 10145, 10451, 11661, 11347, 11959	Fujitsu Siemens:	10809
		Funai:	11394, 10171, 10180, 1079, 11271, 11904, 11913, 11963
CXC:	10180	FutureTech:	10180
Cytron:	11326	Gateway:	11756, 117566
Daewoo:	10154, 10451, 11661, 10623, 10661, 10672, 13115	GE:	11447, 10178, 10047, 10051, 10451, 10765, 11347, 11547, 11917
Dell:	11264, 11863	GFM:	11864, 11886, 10171, 11665, 11963
Denon	10145	Gilbralter:	10017
Digital Lifestyles:	11765, 11892	GoldStar:	10178
Disney:	11665, 11892	GPX:	10179, 12617, 12784, 13402
Dumont:	10017	Grunpy:	10180, 10179
Durabrand:	10178, 10171, 10463, 10180, 11463, 11570, 11595, 11665	H&B:	11366
		Haier:	11753, 11749, 11748, 11570, 12293, 12309, 12494, 12690, 13204, 13382
Dynex:	12049, 11463, 12184	Hallmark:	10178
Electric Mirror:	13166	Hanns.G:	11783
Electrograph:	11755, 11623	Hannspree:	11348, 11351, 11352, 11745, 11783, 12786
Electrohome:	10463, 11570, 11670, 11672	Harley Davidson:	10179, 11904
Electron:	12855	Harman/Kardon:	10054
Element:	11886, 12183, 12964, 13559	Harvard:	10180
Elite:	13867	Havermy:	10093
Emerson:	11864, 11394, 11886, 10178, 10171, 10154, 10451, 10463, 10180, 11661, 11595, 11665, 10623, 10179, 11911, 11913, 11944, 11963, 12183, 13559	Helios:	10865
		Hello Kitty:	10451
Emprex:	11422, 11765	Hewlett Packard:	11642, 11494, 11089, 13126
Envision:	11589, 12087, 11365, 12014	Hidear:	13817
		Hisense:	10748, 11314, 11660, 12183, 13519
Epson:	11122	Hitachi:	11643, 10145, 10679, 10797, 11484, 11576, 11904, 13149
ESA:	10171, 11595, 11944, 11963	Hyundai:	11219, 13418
Fisher:	10154, 11362		

Setup Code List for DIRECTV RC71H Remote Control

iLo:	11394, 11463, 11286, 11603, 11665, 11684, 11990, 13149	Mangavox:	11867, 11454, 11455, 12597, 12372, 11755, 10054, 10171, 11051, 10706, 13292, 12492,
Infinity:	10054		10179, 11990, 11963, 11944, 11931, 11913, 11904, 10186, 11856, 10230, 10802, 11365, 11198, 11054, 11012
InFocus:	11366	Marantz:	11454, 11054, 10704, 11054, 11154, 11398, 11714
Initial:	11603		
Insignia:	12049, 11423, 1156, 10171, 10463, 12751, 12432, 12417, 12184, 12088, 12002, 11963, 11892, 11660, 11641, 11517, 11385, 11326, 11204	Matsushita:	10250, 10650
Inteq:	10017	Maxent:	11755, 11714, 11757
iRIS:	12189	MB Quart:	11868
iSymphony:	13094, 13118, 13382	Megapower:	10700
JBL:	10054	Megatron:	10178, 10145
JCM:	12189, 12256	Memorex:	10178, 10154, 10463, 10150, 10179, 11570, 11665, 11670, 11892, 11903, 11911, 11924, 11927, 11938, 12739
Jensen:	11299, 11362, 12541, 13204		
JVC:	11601, 12271, 12264, 10650, 11774, 10463, 10731, 11253, 11352, 11670, 11923, 12321, 13650, 13854	MGA:	10178, 10150
KDS:	11498	Midland:	10047, 10017, 10051
KEC:	10180	Mintek:	11603, 11990
Kingston:	13284	Mitsubishi:	11250, 10093, 10178, 10150, 11797, 11917
Klegg:	11366	Monivision:	10700
KLH:	10765	Motoaola:	10093
Konka:	11385	MTC:	10060
Kost:	11483	Multitech:	10180
KTV:	10180	MX Onda:	11498
Lasonic:	13198	NAD:	10156, 11156, 10178
LG:	11423, 12358, 12731, 12424, 128234, 10178 10017, 11265, 10700, 12612, 12865, 13941	Naxa:	12104, 12735, 13154, 13382
Lloyd's:	11094	NEC:	10704, 11398, 11704, 11797, 12293, 13257
LodgingStar:	13147	NetTV:	11755
LXI:	10156, 10054, 10178, 10047, 10154	Nexus Electronics:	12183
MAG:	11498	Nikko:	10178
Magnasonic:	11913	Nimbro:	12104
		Norcent:	11589, 10748, 11089, 11365, 11590, 11591, 11745
		Norwood Micro:	11286
		NuVision:	11657, 12158

Setup Code List for DIRECTV RC71H Remote Control

Olevia:	11610, 11144, 11240, 11311	Prism:	100551
ONN:	12434, 11756	Proscan:	11447, 10047, 11347, 12147, 12183, 12256, 13382, 13577, 13717
Onwa:	10180	Proton:	10178
Optimus:	10250, 10650, 10154, 11913, 11924, 11927	Proview:	11498
Optique:	12189	Pulsar:	10017
Optoma:	11348	Pyle:	12196, 12641
Optonica:	10093	Quasar:	10250, 11291, 10650, 11051, 11924, 11927
Orion:	10463, 11463, 10179, 11911, 11938, 13540	Radioshack:	10178, 10047, 10154, 10180, 11904
Otic:	11498	RCA:	11447, 12434, 12746, 12932, 12187, 10093, 10047, 10051, 11661, 13938, 13717, 13577, 13382, 13147, 12855, 12183, 12002, 11959, 11958, 11917, 11868, 11781, 11547, 11385
Panasonic:	11480, 10250, 11291, 12264, 10650, 10051, 11271, 11924, 11927, 1941, 11946, 11947, 12240, 12654	Realistic:	11347, 10679, 10090
PARK:	11376, 12104, 12194, 12202	RevolutionHD:	10178, 10154, 10180
Penney:	10156, 10178, 10060, 10047, 10051, 11347	Roku:	12049, 11463, 12183, 10706, 11756
Philco:	11394, 10054, 10171, 10179, 11271, 11665, 11963	Runco:	11623
Philips:	11867, 11454, 11455, 11744, 12597, 12372, 11394, 10054, 10171, 13565, 13292, 12740, 12665, 12652, 12492, 11990, 11961, 11944, 11856, 11483, 11365, 11154, 11054, 11012, 10230	Sampo:	10017, 11398
Pioneer:	11457, 10679, 11260, 11398, 12240, 13254	Samsung:	10702, 10650, 10178, 10060, 10766, 10814, 11060, 11235, 11267, 11903, 11959, 12596, 12733, 12814, 10812, 11575, 10054, 11395, 11030, 11312, 11632, 11249, 10038, 10618, 10587, 10427, 10329, 10056
Planar:	11589	Sansui:	10171, 10463, 11463, 11409, 11670, 11892, 11904, 11911, 11935, 11938, 13540, 13564
Polaroid:	11523, 11498, 10765, 11276, 11286, 11314, 11316, 11326, 11385, 10865, 11538, 11762, 11766, 11767, 11769, 11826, 12002, 12121	Sanyo:	10706, 10799, 11756, 10893, 10885, 12049, 12434, 11142, 10054, 10154, 10088, 11362
Portland:	10451, 11661		
Power Acoustik:	11865		
Prima:	11753, 11749		
Princeton:	10700		

Setup Code List for DIRECTV RC71H Remote Control

Sceptre:	10878, 11217, 11360, 11599, 12337, 12506, 12528		11913, 11931, 11944, 11961
Scotch:	10178	Symphonic:	11394, 10171, 10180, 11595, 11904, 11913, 11944
Scott:	10178, 10180, 10179, 11711	Syntax:	11610, 11144, 11240, 11311
Sears:	10156, 10054, 10179, 11711, 10171, 10154, 10179, 11904	TAG:	13498
Seiki:	10178, 12964, 13559, 13560, 13953	Tandy:	10093
Seleco:	11351	Tatung:	11756, 11286
Sens:	11865	TCL:	12434
Sharp:	12360, 10818, 10093, 11393, 11917, 12402, 13867	Technics:	10250, 10051
Sheng China:	10093	Technol Ace:	10179
Sherwood:	11399, 13061	Techwood:	10051
Sigmac:	13423, 13477	Teknika:	10054, 10060, 10180, 10150, 10179, 10186
Signature:	10054	Telefunken:	10702
Silo Digital:	13794	Thomas America:	11904
Simpson:	10186	TMK:	10178
Skyworth:	11799, 13253	TNCi:	10017
Sole:	11366, 11483m 11623	Toshiba:	11524, 11656, 10156, 11156, 11256, 11936, 12006, 10650, 10060, 10154, 11265, 11369, 11343, 11704, 11916, 11935, 11945, 11959, 12667, 12684
Sony:	11300, 11317, 11685, 11786, 11791, 11904, 12736	Toshinaer:	13576
Soundesign:	10178, 10180, 10179, 10186	TruTeeh:	11665, 11723, 12066
Soyo:	1152, 11826	TVS:	10463
Spectroniq:	11498	Upstar:	11758
Squareview:	10171	US Logic:	11286
SSS:	10180	Venturer:	11865, 11868
Starlite:	10180	Vidikron:	10054, 11398
SunBriteTV:	11610, 11420, 11435, 12337, 12528, 12925, 12935	Vidtech:	10178
Superscan:	10864, 10093, 11944	Viewsonic:	12049, 10864, 11755, 11564, 12087, 13706, 12839, 12745, 12277, 12111, 12014, 11742, 11627, 11578, 11542, 11365, 11330, 10885, 10857, 10797
Supersonic:	11753, 12104, 12784, 13154, 13204, 13593, 13595, 13877, 13894	Viore:	11207, 11684, 11811, 12104, 12352, 13094, 13118, 13159, 11382
SVA:	10748, 10865, 11963	VisionQuest:	13380
Sylvania:	11864, 11394, 11886, 10054, 10171, 11271, 11314, 11595, 11665,		

Setup Code List for DIRECTV RC71H Remote Control

Vivitek:	11369	Wards:	10156, 11156, 10054,
VIZIO:	11758, 13758, 12757,		10178, 10060, 10047,
	10864, 11756, 10885		10154, 10017, 10051,
Vuon:	13418		10180, 10179, 10186,
			11347
		Waycon:	10156
		Westinghouse:	11712, 13470, 13579,
			12397, 10451, 13949,
			13908, 13382, 13094,
			12499, 12293, 12195,
			11577, 11300, 11282,
			11217, 10890, 10885
		White Westinghouse:	10890. 10885
		Wyse:	11365
		Yamaha:	10797, 11576
		Zenith:	11423, 12358, 12731,
			10178, 10047, 10017,
			10463, 11265, 10145,
			11661, 11365, 11904,
			11911, 12612, 12742

Setup Codes for 3D TV (T)

Coby:	13478
Dynex:	12049
Elite:	13867
Hisense:	13519
LG:	11423, 12731, 12424,
	11265
Panasonic:	11480, 11941
Sanyo:	11142
Sceptre:	12337
Sharp:	12360, 13867
Toshiba:	11524
VIZIO:	11758

Setup Codes for DLT (T)

Audiovox:	11951
Durabrand:	11665
Hewlett Packard:	11494
iLo:	11463
LG:	11423, 11265
Mitsubishi:	11250
NuVision:	12158
Orion:	11463
Panasonic:	11480, 11291, 10650

Setup Code List for DIRECTV RC71H Remote Control

Philips:	11867	Electron:	12855
RCA:	11447	Element:	11886, 12183, 12964, 13559
Samsung:	11060	Emerson:	11864, 11394, 11886, 10171, 11963, 12183, 13559
Sansui:	11463, 11892		
Toshiba:	11524, 11265		
Viore:	11811		

Setup Codes for LCD (T)

Acer:	11339	Emprex:	11422, 11765
Akai:	11675, 111385, 11688, 11692, 11935, 12232	Envision:	11589, 12087, 11365, 12014
AOC:	11589, 12087, 11365, 12014, 12402, 12621,	Epson:	11122
Aomni:	11623	Fluid:	12964
Apex Digital:	12397, 10890, 11217	Funai:	10171
Astar:	11531	GFM:	11864, 11886
Asus:	13340	GPX:	10179, 12617, 12784, 13402
Audiosonic:	11675	H & B:	11366
Audiovox:	11564, 10180, 13410, 13065, 12513, 12413, 12121, 11951, 11937, 11868, 11865, 11769, 11766, 11276, 10875, 10846, 10802	Haier:	11753, 11749, 11748, 12293, 12309, 12690, 13382
Auria:	12087, 12277	Hanns. G:	11783
BenQ:	11315, 11562	Hannspree:	11348, 11351, 11352, 11745, 11783, 12786
Byd:sign:	11311	Hewlett Packard:	11642, 11494, 13126
Citizen:	11672, 11935	Hidear:	13817
Claris:	13807	Hisense:	11314, 11660, 12183, 13519
Coby:	13478, 16464, 13627, 13493, 13202, 12560, 12348, 12344, 12340, 12338, 12326, 12315, 12314, 12306, 12017, 11634, 11538	Hitachi:	11643, 11576, 12207, 12756
Cornea:	13677	Hyundai:	11219, 13418
Craig:	13423	iLo:	11394, 11286, 11603, 11684, 11990, 13149
Crosley:	13115	InFocus:	11366
Curtis:	12397, 12352, 12466, 12855, 12859, 13228, 13577, 13895	Initial:	11603, 11990
Dell:	11264, 11863	Insignia:	12049, 11564, 11204, 11517, 12002, 12184, 12417, 12754
Digital Lifestyles:	11765, 11822	iRIS:	12189
Dynex:	12049, 12184	iSymphony:	13094, 13118, 13382
Electric Mirror:	13166	JCM:	12189, 12256
Electrohome:	11672	Jensen:	11299, 12541, 13204
		JVC:	11601, 12271, 11774, 11253, 11670, 12321, 13650, 13854
		Kingston:	13284
		Klegg:	11366
		Kost:	11483
		L,asonic:	13198

Setup Code List for DIRECTV RC71H Remote Control

LG:	11423, 12358, 12731, 12424, 12834, 10187, 11265, 12864	RCA:	11447, 12434, 12746, 12932, 12187, 10047, 11781, 11868, 1958, 12183, 12855, 13382, 135767, 13938
LodgingStar:	13147	RevolutionHD:	11623
Magnavox:	11455, 12372, 10802, 11012, 11198, 11365, 11944, 11990, 13292	Sampo:	11755
Marantz:	11454	Samsung:	10702, 10766, 10814, 11235, 12596, 12733, 12814
Maxent:	11755, 11714, 11757	Sansui:	11409, 11670, 11892, 11935, 13540, 13564
MB Quart:	11868	Sanyo:	11142, 11362
Memorex:	10179, 11570, 11670, 11892, 12739	Sceptre:	10878 11217, 11360, 11599, 12337, 12506, 12528
Mintek:	11603, 11990	Scott:	11711
Mitsubishi:	11250, 10150, 11797	Seiki:	10178, 12964, 13559, 13560, 13953
Naxa:	12104, 12735, 13154, 13382	Sens:	11865
NEC:	11398, 11797, 12293, 13257	Sharp:	12360, 10818, 10093, 11393, 12402
Nexus Electronics:	12183	Sherwood:	11399, 13061
Norcent:	11589, 11089, 11365, 11591, 11745	Sigmac:	13477
Norwood Mirco:	11286	Silo Digital:	13794
NuVision:	11657, 12158	Skyworth:	11799, 13253
Olevia:	11610, 11144, 11240, 11331	Sole:	11366, 11483, 11623
Optique:	12189	Sony:	11317, 11685, 11786, 11791, 12736
Orion:	13540	Soyo:	11520, 11826
Panasonic:	11480, 11291, 10650, 11941	SunBriteTV:	11610, 11420, 11435, 12337, 12528, 12925, 12935
PARK:	12104, 12194, 12202	Superscan:	10864
Philco:	11394, 10171, 11963	Supersonic:	12104, 12784, 13154, 13204, 13593, 13595, 13877, 13894
Philips:	11867, 11454, 11455, 11744, 12372, 10230, 11483, 11856, 13292, 13565	SVA:	11963
Pioneer:	11260	Sylvania:	11864, 11394, 11886, 10171, 11271, 11314, 11963
Planar:	11589	Symphonic:	11394, 10171, 11595
Polaroid:	11523, 11498, 11276, 11314, 11316, 11538, 11762, 11766	Syntax:	11610, 11144, 11240, 11331
Prima:	11767, 11769, 12121	TAG:	13498
Proscan:	11753, 11749, 12256, 13382, 13577	Tatung:	11286
Pyle:	12196, 12641		

Setup Code List for DIRECTV RC71H Remote Control

TCL:	12434	Coby:	11538, 12314, 12315,
Toshina:	11524, 11656, 10156,		12340, 12344, 12347,
	11256, 12006, 11343,		12560, 13202, 13627
	11935, 12667	Curtis:	12466, 12855, 13895
Toshinaer:	13576	Duraband:	10171
TruTech:	11723	Dynex:	12049, 12184
US Logic:	11286	Electrohome:	11670
Venturer:	11865, 11868	Emerson:	11864, 11394, 11886,
Vidikron:	11398		11963
Viewsonic:	12049, 10864, 11564,	ESA:	11963
	12087, 10857, 10885,	Funai:	11394, 11963
	11330, 11365, 11542,	GFM:	11963
	11578, 11627, 11742,	GPX:	12617, 12784
	12014, 12111, 12277,	Haier:	11753, 11749, 11748,
	12745		12309
Viore:	11684, 11811, 12104,	Hisense:	13519
	12352, 13094, 13118,	Hitachi:	12207, 12756
	13159, 13382	iLo:	11990
VisionQuest:	13380	Initial:	11990
Vivitek:	11369	Insignia:	12049, 11892, 12963,
VIZIO:	11758, 13758, 12757,		12002, 12417, 12751
10864, 11756, 10885		iSymphony:	13094
Vuon:	13418	JVC:	12271 11774, 11670,
Westinghouse:	11712, 13470, 13579,		13854
	12397, 13949, 13908,	LG:	11423
	13382, 13094, 12499,	Mangavox:	11454, 12372, 11944,
	12293, 12195, 11577,		11963, 11990
	11300, 11282, 11217,	Maxent:	11714
	10890, 10885	Memorex:	10463, 11670, 11911
Wyse:	11365	Mintek:	11603, 11990
Zenith:	11423, 10178, 10017,	Naxa:	12104, 13382
	11265, 11365, 12612,	Nimbro:	12104
	12742	Panasonic:	10051, 11924, 11927,
			11941, 11947, 12654
		Philco:	11963
		Philips:	11454, 12372, 11394,
			11961, 12740
		Polaroid:	11523, 11538, 11766,
			11769, 12002
		Power Acoustik:	11865
		Prima:	11753
		Proscan:	12256
		Pyle:	12196
		RCA:	11447, 12746, 12932,
			12187, 10047, 11868,
			11958, 12002, 13382

Setup Codes for TV/DVD Combinations (T)

Advent:	11570
Affinity:	13717
Akai:	11675, 11935, 12232
Apex Digital:	10765, 11943
Audiovox:	11766, 11865, 11868,
	11937, 11951, 12413,
	12513, 13065, 13410
Axion:	11937
Broksonic:	10463, 11935
Citizen:	11935

Setup Code List for DIRECTV RC71H Remote Control

Samsung:	11903
Sansui:	11670, 11935, 13564
Sceptre:	12528
Sens:	11865
Sharp:	12360, 10818
Skyworth:	11799, 13253
Supersonic:	11753, 12104, 12784, 13593, 13595, 13877, 13894
Sylvania:	11864, 11394, 11886, 10171, 11944, 11963
Symphonic:	11595, 11944
Toshiba:	11524, 11656, 11256, 12006, 11935, 12667, 12684
TruTech:	12066
Venturer:	11865, 11868
Viewsonic:	12049, 10864
Viore:	11811, 12104, 12352, 13094, 13118, 13382
VisionQuest:	13380
Westinghouse:	11712, 11300